


AC-PRO™ Changing/Reviewing Settings Condensed Procedure

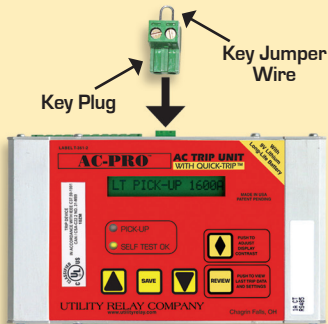

Commissioning/Changing Settings

1. Insert the security key jumper wire
2. Press the REVIEW button
3. Press the SAVE button to begin
4. The SAVE button advances to the next setting
5. The UP and DOWN buttons change the setting (see procedure for CT Rating)
6. After last setting follow screen prompts to save settings
7. Remove the security key jumper wire

To change the CT Rating when Changing Settings

- a. When CT Rating is displayed
- b. Press the REVIEW button and hold then press the SAVE button, release both buttons
- c. The UP and DOWN buttons now change CT Rating

Reviewing Last Trip Data and Settings

1. No security key jumper wire
2. Press the REVIEW button
3. Last trip data is displayed
4. Press the REVIEW button to continue
5. View the trip counts and settings or just the settings

Trip Count Review:

Press and hold the REVIEW button then press the REVIEW button to step through trip counts and settings

Settings Review:

Press and release the REVIEW button then press the REVIEW button to step through settings

Clearing the Last Trip Data

1. No security key jumper wire
2. Press the REVIEW button to display the last trip data
3. Push and hold both UP and DOWN buttons
4. While still holding the UP and DOWN buttons, press the SAVE button.
5. Release all three buttons.
6. "NO LAST TRIP" is displayed

For detailed instructions see the
**AC-PRO instruction manual or
view the video
"Programming the AC-PRO".**